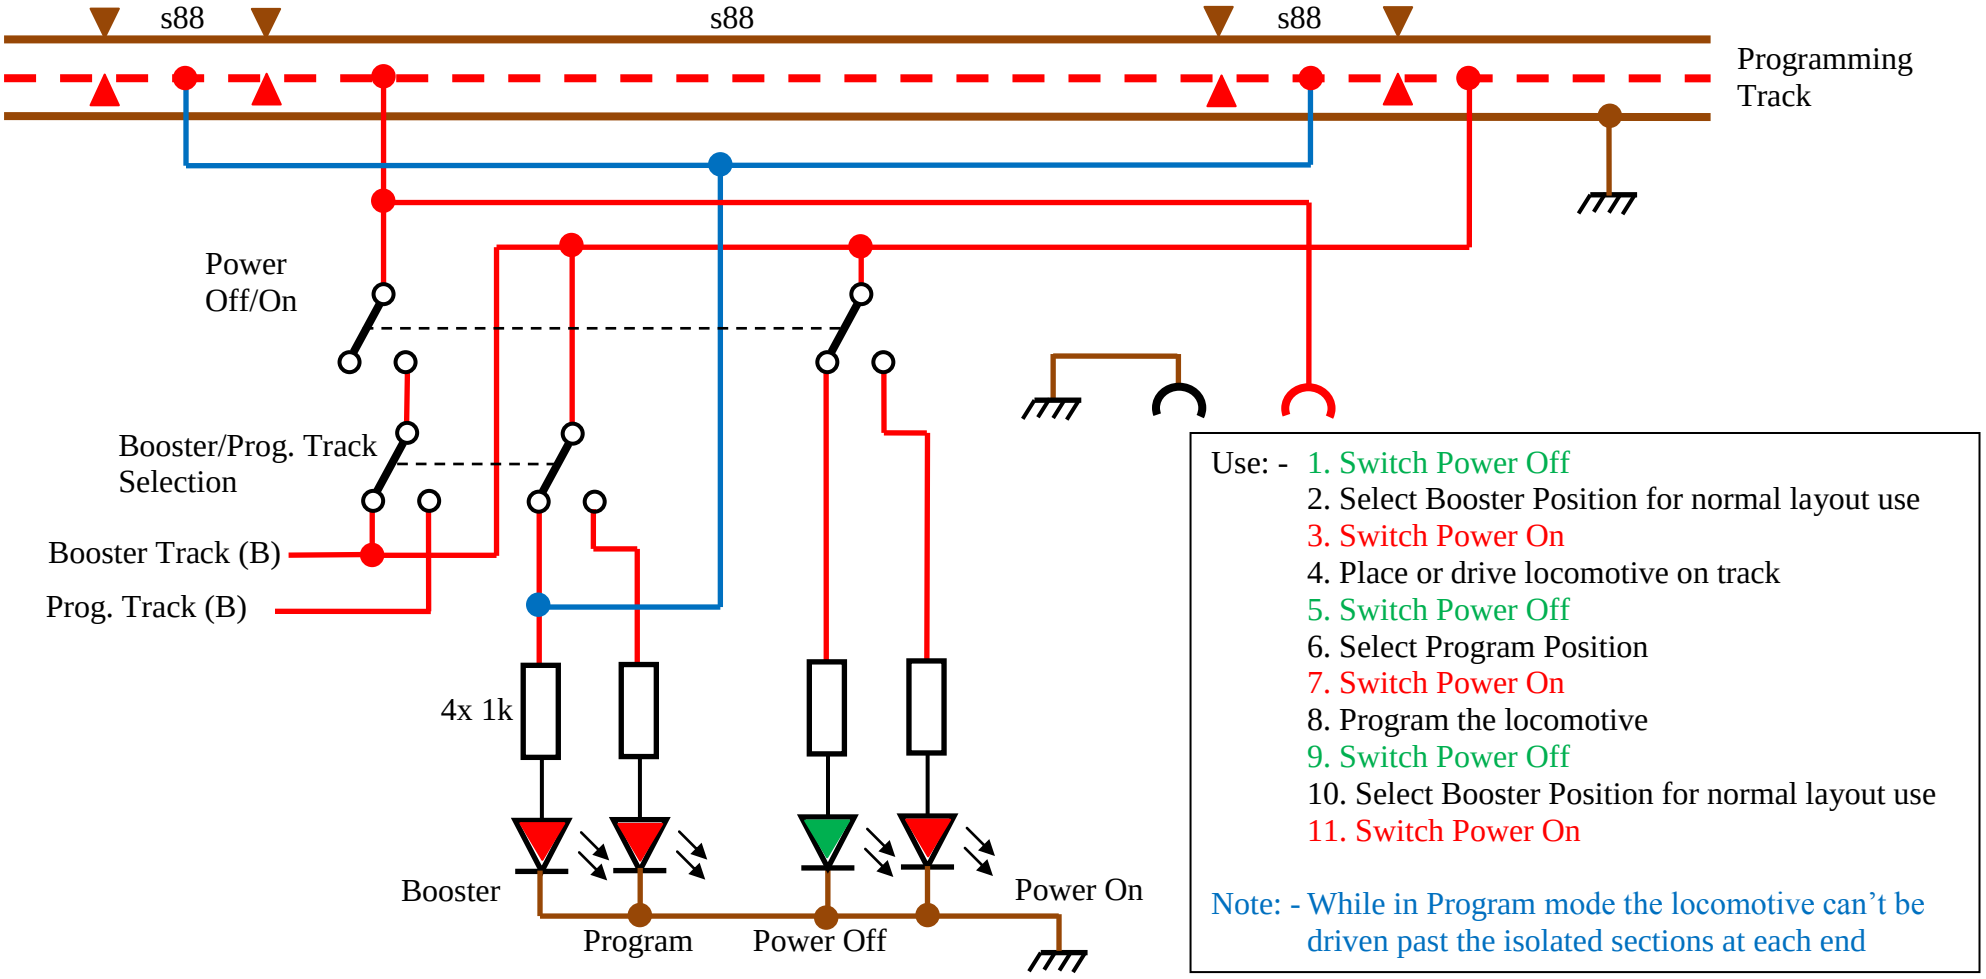

Use: -
1. Switch Power Off
2. Select Booster Position for normal layout use
3. Switch Power On
4. Place or drive locomotive on track
5. Switch Power Off
6. Select Program Position
7. Switch Power On
8. Program the locomotive
9. Switch Power Off
10. Select Booster Position for normal layout use
11. Switch Power On
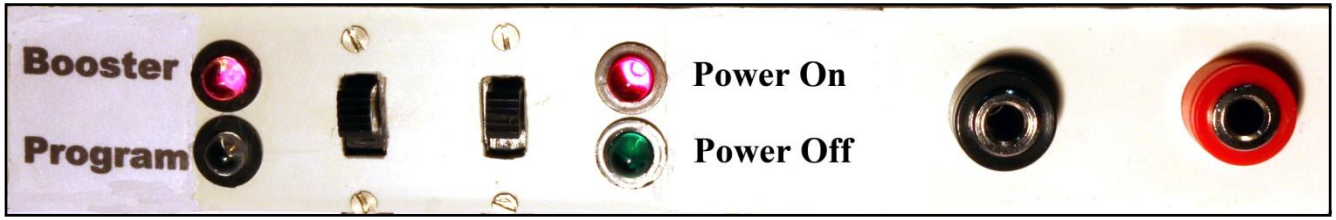
Note: - While in Program mode the locomotive can't be driven past the isolated sections at each end